

Terminal Configurations

Terminal shapes vary from one battery to another. By identifying the correct replacement battery from the listing in this book, you are assured of the proper terminal configuration. For custom applications, refer to the following chart to identify terminal shape and corresponding batteries.

Type	Terminal Shape			Battery Type					
	Front	Side	Top						
1				YB14L-A1	YTX16-BS-1				
2				YB9L-A2	YB16AL-A2	12N5.5-4A			
3				Y60-N24-A	12N24-3	12N24-3A	YB7C-A	12N24-4	
4				YB12C-A YTX14L-BS YTX20CH-BS YTX20HL-BS-PW	YB16B-A YTX14AH-BS YTX20-BS YTX24HL-BS	Y50-N18L-A3 YTX14AHL-BS YTX20L-BS GYZ20L	YB30L-B YTX14H-BS YTX20H-BS YTX16-BS	YB30CL-B YTX15L-BS YTX20HL-BS	
5				YTZ3 YTX4L-BS YT12A-BS YB4L-A	YTZ5S YTX5L-BS YTX12-BS YB4L-B	YTZ6 YTX7A-BS YTX14-BS YB16C-B	YTZ7S YTX7L-BS YTX20A-BS YB16CL-B	YTZ8V YTX9-BS YDX30L GYZ16HL	
6				YB3L-A YB7B-B YB10L-B YB14A-A1 YB16HL-A-CX 12N5.5-4B 12N9-3B 12N18-3 6N11-2D B39-6	YB3L-B YB7L-B YB10L-BP YB14L-A 12N5-3B 12N7-3B 12N9-4B-1 6N6-3B 6N12A-2D B49-6	YB5L-B YB9A-A YB12A-A YB16-B 12N5-4B 12N7-4A 12N10-3B 6N6-3B-1 6YB8L-B B54-6	YB6L-B YB9-B YB12A-B YB16-B-CX 12N5.5-3B 12N7-4B 12N10-3B-A 6N11A-1B 6YB11-2D	YB7-A YB9L-B YB12AL-A YB16L-B 12N5.5A-3B 12N7D-3B 12N12A-4A-1 6N11A-3A B38-6A	
7				HYB16A-AB Y50-N18L-A	YB16B-A1** Y50-N18L-A2	YB18-A Y50-N18L-A-CX	YB18L-A SY50-N18L-A	Y50-N18A-A SY50-N18L-AT	
8				YB10A-A2 YB14-A2 YB14-B2	YB10L-A2 YB14A-A2 YB14L-B2	YB10L-B2 YB14L-A2 12N10-3A-2	YB12AL-A2* SYB14L-A2 12N11-3A-1	YB12B-B2 SYB14L-B2 12N14-3A	
9				YHD-12	6N12A-2C	12N9-3A			
10				51814	52015	51913	52515	53030	
11				YT7B-BS YTZ12S	YT9B-BS YTZ14S	YT12B-BS	YT14B-BS	YTZ10S	
12				YTR4A-BS					
13				YT4B-BS					
14				GYZ20H	GYZ20HL	GYZ32HL			

* Includes terminal adaptor for converting to top mount. ** Includes terminal adaptor for converting to side mount.